

Anderson Enterprises

2804 Shoreline Dr. W Salina, Kansas 67401
phone 785.827.3014

www.andersonbuzzersystems.com
support@andersonbuzzersystems.com

The Pro.to.go Portable Buzzer System Instruction Sheet

Introduction

Congratulations on your purchase of the Officiator Pro.to.go Buzzer System. It has been designed with speed, accuracy, and your budget in mind. This System is powered with 3-AA batteries ~ use it while camping, in the car, or anywhere on-the-go. The Pro.to.go System comes complete with the Moderator Module, batteries, your choice of Player Buttons, and a carry case. Player Button choices are: Hand-held and Player Handpad.

System Set-Up

...with Hand-held Player Buttons

The gray cables connected to each Hand-held Button individually plug into the sides of the Pro.to.go Moderator. The Pro.to.go System can be used with up to 4 player buttons. To avoid unnecessary wear to the cables, do not wrap the gray cable around each Hand-held button when packing away the system since this adds unnecessary stress to the cable. The cable can be replaced by simply disconnecting and replacing with our 'C5' cable or any audio cable with male RCA connectors on each end.



Pro.to.go System with Hand-held Buttons



Pro.to.go System with Player Handpads

System Set-Up

...with Player Handpads

The gray cables connected to each Player Handpad individually plug into the sides of the Pro.to.go Moderator. The Pro.to.go System can be used with up to 4 player buttons. To avoid unnecessary wear

to the cables, do not wrap the gray cable around each Handpad when packing away the system since this adds unnecessary stress to the cable. The Handpad cable is hard-wired and should be sent to our Technical Department to have its defective cable replaced. For more information on parts repair, go to:

<http://www.andersonbuzzersystems.com/support.html> at bottom of page

System Power-Up

The Pro.to.go Moderator has a power-on slide switch on the right side of the Moderator. When powered-up, the “ON” LED will light and the circuitry will go through a 2 second self-test after which time it is ready for play. To save battery power, remember to turn off your Pro.to.go Moderator when not in use. The “ON” LED will be off to indicate power-down. To replace the batteries, see the instructions below.

How the Pro.to.go System Works

The Pro.to.go's circuitry detects and indicates which of the 4 player buttons was pushed first. The accuracy of this detection is within 10 microseconds. When a button is pushed, the circuitry locks out the other three buttons so there can be no ties. The one lit LED on the Moderator Module will remain lit until the Moderator's Reset Button is pushed to ready the system for the next question.

The Pro.to.go Moderator has a volume control on the left side. If you hear no sound when buzzing in, please check to make sure the volume knob is turned all the way clockwise.

Battery Replacement

The Pro.to.go Moderator is powered by 3 AA batteries. To replace them, simply remove the square rubber feet on the bottom cover to expose two screws. Remove screws and pop-off bottom cover. The battery holder is attached to the reverse side of the cover with two #2 screws and nuts. Do NOT remove these screws. Replace batteries, snap on bottom cover (making sure to not pinch any wires with the cover), and secure with two screws. Replace rubber feet and it's ready to go. Be sure to replace all three batteries with new ones. Do not mix old and new batteries.

Warranty

Anderson Enterprises warrants to the original purchaser that the Pro.to.go System is free from defects in material and workmanship, assuming normal use, for a period of one year from date of purchase.

For more warranty information, please check out:

<http://www.andersonbuzzersystems.com/support.html> at bottom of page

